


TYPICAL TEMPORARY PROPPING - WINDOW OPENING

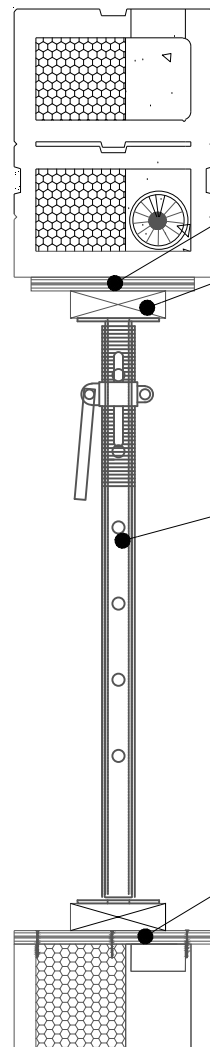

Plywood packer

Timber head plate

**Telescopic props left in place until
concrete infill around reinforcing bars
has cured**

**Plywood packer screwed down to
blocks to close off cavity and prevent
overspill of concrete during pouring
process**

Durisol UK
THE ORIGINAL ICF SYSTEM

www.durisoluk.com

Telephone: 01495 249 400

Email: enquiries@durisoluk.com

DURISOL UK

Parkway, Pen-y-Fan Industrial Estate,
Crumlin, Gwent, NP11 3EF

DURISOL TECHNICAL RESOURCES

DRAWING NUMBER: DGD212

REV:

NOT TO SCALE

FOR INFORMATION ONLY. ALWAYS USE A STRUCTURAL
ENGINEER FOR YOUR SPECIFIC PROJECT DETAILS