


TYPICAL SPLAYED CORNER DETAIL

Durisol blocks cut on site to required angle. Block cut to allow for full width of insulation at corner. If snug fit cannot be achieved between cut blocks utilise temporary shuttering to concrete pour

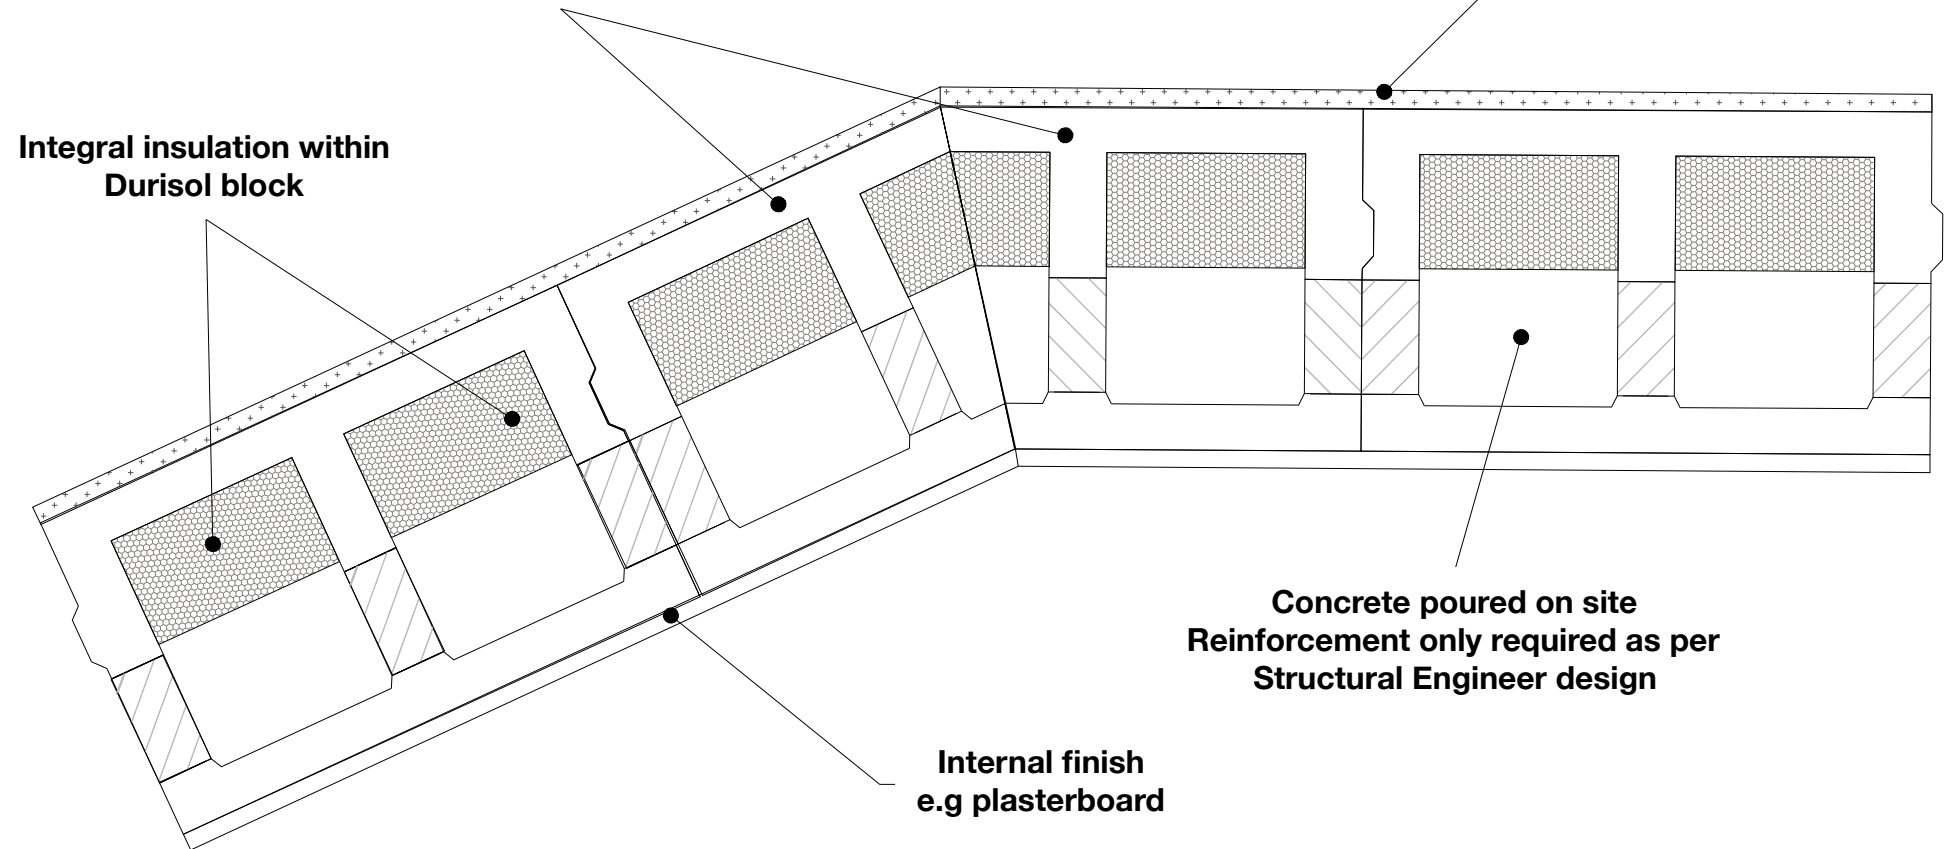

Durisol UK
THE ORIGINAL ICF SYSTEM

www.durisoluk.com

Telephone: 01495 249 400

Email: enquiries@durisoluk.com

DURISOL UK

Parkway, Pen-y-Fan Industrial Estate,
Crumlin, Gwent, NP11 3EF

DURISOL TECHNICAL RESOURCES

DRAWING NUMBER: DTP016

REV:

NOT TO SCALE

FOR INFORMATION ONLY. ALWAYS USE A STRUCTURAL
ENGINEER FOR YOUR SPECIFIC PROJECT DETAILS